

Appliances properties: Olsberg GmbH - Olsberg - Osorno L Typ Nr. 41/636 (Raumheizer) - 41/636

Master data Date of entry Nov 14, 2018 Manufacturer Olsberg GmbH - Olsberg Model Osorno L Typ Nr. 41/636 (Raumheizer) 41/636 Product code Nominal heat output [kW] 7.8 Declared nominal space heating output [kW] 7 Continuous burning appliance Type test standard **DIN EN 13240** 2018 Year of testing **Test laboratory** Strojirensky Zkusebni Ustav s.p. Number of test laboratory 19 Number of test report 30-13977-T Flue gas values Wood Flue gas mass flow [g/s] 7.1 Flue gas mass flow [g/s] 222.6 Necessary flue draught [Pa] 11

Further important characteristics of the appliance

Suitability for installation to a shared flue¹⁾

Connectivity to the central heating system

General technical approval for room sealed operation

On behalf of the manufacturer, the HKI Industrieverband e.V. hereby confirms compliance with the respective requirements* in accordance with 1.BImSchV. The type test report of the fireplace has been submitted to the HKI Industrieverband e.V.

¹⁾ For unsealed operation it is possible to install the appliances to a shared flue system (please see installation manual).

^{*} A green check mark with a "1" indicates that the requirements of the 1st BImSchV are fulfilled, a green check mark with a "2" indicates that the 2nd level of the 1st BImSchV is fulfilled. A yellow check mark shows that the transitional regulation of the 1st BImSchV is fulfilled and a red line means that the 1st BImSchV is not fulfilled.

Evaluation of emission data and efficiency Wood

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	Stufe 2
A - Austrian regulation referred to Art 15a B-VG	2015
CH - Swiss clean air act	✓
DK - Danish regulation for air pollution from wood burners	✓
F - Crédit d'impôt à la transition énergétique	7☆

Evaluation of emission data and efficiency Lignite briquettes

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	



No symbol means that there are no requirements.

No measuring values are available for this fuel, operation with this fuel is not permitted

Here you will find further information