

## Appliances properties: HWAM A/S - HWAM 4130 IHS

Date of entry	Nov 4, 2020	
Manufacturer	HWAM A/S	
Model	HWAM 4130 IHS	
Nominal heat output [kW]	5.3	
Continuous burning appliance	_	
Type test standard	DIN EN 13240	
Year of testing	2020	
Test laboratory	RRF Rhein-Ruhr-Feuerstättenprüfstelle GmbH	
Number of test laboratory	2	
Number of test report	RRF - 40 20 5546	
Flue gas values		
Flue gas values		Wood
Flue gas mass flow [g/s]		3.7
Flue gas mass flow [g/s] Flue gas mass flow [g/s]		3.7 214
Flue gas mass flow [g/s] Flue gas mass flow [g/s]		3.7
Flue gas mass flow [g/s] Flue gas mass flow [g/s] Necessary flue draught [Pa]  Further important characteristics of the appliance		3.7 214

Connectivity to the central heating system

General technical approval for room sealed operation

On behalf of the manufacturer, the HKI Industrieverband e.V. hereby confirms compliance with the respective requirements\* in accordance with 1.BImSchV. The type test report of the fireplace has been submitted to the HKI Industrieverband e.V.

<sup>1)</sup> For unsealed operation it is possible to install the appliances to a shared flue system (please see installation manual).

<sup>\*</sup> A green check mark with a "1" indicates that the requirements of the 1st BImSchV are fulfilled, a green check mark with a "2" indicates that the 2nd level of the 1st BImSchV is fulfilled. A yellow check mark shows that the transitional regulation of the 1st BImSchV is fulfilled and a red line means that the 1st BImSchV is not fulfilled.

## Evaluation of emission data and efficiency Wood

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	Stufe 2
A - Austrian regulation referred to Art 15a B-VG	2015
CH - Swiss clean air act	<b>✓</b>
DK - Danish regulation for air pollution from wood burners	✓
F - Crédit d'impôt à la transition énergétique	7☆

## Evaluation of emission data and efficiency Lignite briquettes

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing	Evaluation
D - 1.BlmSchV	



No symbol means that there are no requirements.

No measuring values are available for this fuel, operation with this fuel is not permitted

Here you will find further information