

## Appliances properties: Oranier Heiztechnik GmbH - Polar Neo 4 R I - 5554

Master data Date of entry Nov 22, 2018 Oranier Heiztechnik GmbH Manufacturer Model Polar Neo 4 R I 5554 Product code Nominal heat output [kW] 5 Declared nominal space heating output [kW] 5 Continuous burning appliance Type test standard **DIN EN 13240** Year of testing **Test laboratory** RRF Rhein-Ruhr-Feuerstättenprüfstelle GmbH **Number of test laboratory** Number of test report RRF - 40 17 4026-1

	Wood
Flue gas mass flow [g/s]	5.3
Flue gas mass flow [g/s]	244
Necessary flue draught [Pa]	12

Further important characteristics of the appliance

Suitability for installation to a shared flue 1)

Connectivity to the central heating system

## General technical approval for room sealed operation

On behalf of the manufacturer, the HKI Industrieverband e.V. hereby confirms compliance with the respective requirements\* in accordance with 1.BImSchV. The type test report of the fireplace has been submitted to the HKI Industrieverband e.V.



<sup>1)</sup> For unsealed operation it is possible to install the appliances to a shared flue system (please see installation manual).

<sup>\*</sup>A green check mark with a "1" indicates that the requirements of the 1st BImSchV are fulfilled, a green check mark with a "2" indicates that the 2nd level of the 1st BImSchV is fulfilled. A yellow check mark shows that the transitional regulation of the 1st BImSchV is fulfilled and a red line means that the 1st BImSchV is not fulfilled.

## Evaluation of emission data and efficiency Wood

Norm DIN EN 13240: Roomheater for wood logs	Evaluation
EU - Regulation (EU) 2015/1185 (Ecodesign)	✓
D - 1.BlmSchV	Stufe 2
A - Austrian regulation referred to Art 15a B-VG	✓
CH - Swiss clean air act	✓
DK - Danish regulation for air pollution from wood burners	✓
F - Crédit d'impôt à la transition énergétique	7☆
I - Italian Decree No. 186	****

## Evaluation of emission data and efficiency Lignite briquettes

Norm DIN EN 13240 (Intermittent burning): Roomheater with flat-layer firing

D - 1.BlmSchV



No symbol means that there are no requirements.

No measuring values are available for this fuel, operation with this fuel is not permitted

Here you will find further information